



Four Button RF Transmitter

Battery exchange Instructions

1



Unscrew the whip antenna and remove the device from the green boot

2



Remove the six case screws with a small Philips screwdriver

3



Open the case and remove the two black Philips screws from the battery case

4



Exchange the three AAA batteries and reassemble the handset by reversing this process