



Four Button RF Transmitter

Instructions to pair with INSTABOOM



Unscrew the whip antenna and remove the device from the green boot



The arrows show the activation point of each device. This is required for the next step.



Touch the bottom left of the transmitter against the top left of the receiver for 1 second, as shown. The receiver will beep once. Press the chosen number switch on the transmitter you wish to pair. The receiver will beep twice to confirm pairing.

Additional

The receiver can store up to 30 transmitter pairings so when a barrier returns to base it is good practise to erase all fob pairings from its memory to prevent unwanted operation. To achieve this, touch the bottom left of the transmitter against the top left of the receiver, as described above, but **hold it in position for over 5 seconds**. The receiver will emit a long beep to confirm all pairings have been erased. You will then need to follow the steps above to pair a new remote fob.