


## Quick Start Guide for PAIRED units



Turn on all units (2, 3 or 4) and check voltage on. Below 11.6V will require unit(s) to be charged



You only need to open the MASTER unit. START SELF TEST..press SELECT.

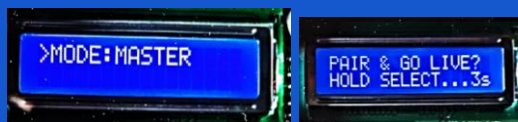

Allow the menu to scroll and check menu displays MASTER and correct number of SLAVES.

When menu arrives at PAIR & GO LIVE, press and hold select for 3 seconds



Press UP/YES (blue button) RETAIN CURRENTS PAIRS. Menu asks that you are sure and refer to manual. If you are certain the units have already been paired together, CONFIRM YES



IBGOs & PAIRING COMPLETE displays. When ready, wait for menu to display READY TO GO LIVE and hold down SELECT for 3 seconds



Master unit will now SYNCHRONISE for approx. 30 seconds. Slave units will also be in sync mode. Once menu reads LIVE OPERATION, units ready to be deployed and used.

For access to full video tutorials and user guides, please visit

[www.solargates.co.uk/resources](http://www.solargates.co.uk/resources)