

## Full Set Up Guide



Turn on all units (2, 3 or 4) and check voltage on. Below 11.6V will require unit(s) to be charged



Open all units. First START SELF TEST..press SELECT. When all have successfully completed test they will read TEST COMPLETE.



It is necessary to allocate one unit to MASTER and the others as SLAVE (up to 3). The master needs to know how many SLAVES are connected. Allow menu to scroll to CHANGE SETTINGS? Then hold select for 3 seconds.



When on MODE, press SELECT (RED) to edit. Use UP & DOWN buttons to select setting. Once set, press SELECT to confirm. If setting as MASTER, you need to set NO OF SLAVES, MIN GO TIME and MIN STOP TIME. When settings correct, select EXIT




When setting a unit to SLAVE, select either SLAVE 1, 2 or 3. SLAVES have no further settings to change. Ensure the MASTER is set to the correct number of SLAVES.



From the MASTER, allow the menu to scroll to PAIR & GO LIVE, press and hold select for 3 seconds. When asked to RETAIN CURRENT PAIRS? Press NO (green)



Master will then instruct to PUT ALL SLAVES 'PAIR & GO LIVE'. From each slave when on PAIR & GO LIVE screen, press Select for 3 seconds. MASTER will then clear all previous pairings.

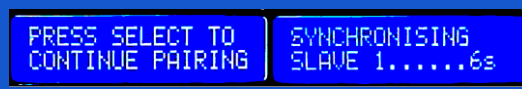

On the MASTER press SELECT to continue pairing. Each slave will then display PAIRING MODE FOLLOW MASTER.

PRESS SELECT ON SLAVE 1 NOW...25s      SYNCHRONISING SLAVE 1.....6s

Master will ask you to press SELECT on each slave, one at a time, within 25 seconds.

PAIRING SLAVE 1 WAIT APPROX 2min      PAIRING COMPLETE FOR ALL SLAVES

Each slave pairing, test and configuration, takes approx. 2 minutes. Please allow time for this procedure. Once paired to SLAVES, the MASTER will move to pairing the handset(s).

NOW PAIR HANDSET HOLD SELECT...3s

MASTER will 'Now pair handset. Press [and hold] SELECT for 3 seconds.

Important to carefully follow instructions. Failure to correctly set up handset requires start from beginning.

WAIT TO PRESS BUTTON 1.....17s      ON HANDSET PRESS BUTTON 1 NOW:6s

'WAIT to press Button 1' is displayed. Once count down timer reached 0 seconds, you must press button 1 within 6 seconds. A simple, quick, but firm press is all that is required.

PRESS BUTTON 1 AGAIN NOW...6s      BUTTON 1 PAIRED

Confirm button allocation with second press of button 1 when instructed. MASTER will ask you repeat the process with buttons 2, 3 and 4, subject to the number of slaves in the system.

PAIR SECOND HANDSET?(YES/NO)      IBGOs & HANDSET PAIRING COMPLETE

Once first remote paired, the MASTER asks if you wish to pair a second (spare) remote. Confirm YES with Blue button and repeat the button pairing process. IBGOs & HANSET PAIRING COMPLETE.

READY TO GO LIVE HOLD SELECT...2s      SLAVE 1 - FOLLOW MASTER INSTRUCTn

IBGOs & HANDSET PAIRING COMPLETE displays. When ready, wait for menu to display READY TO GO LIVE and hold down SELECT for 3 seconds

MASTER SYNCHRONISING...      LIVE OPERATION

Master unit will now SYNCHRONISE for approx. 30 seconds. Slave units will also be in sync mode. Once menu reads LIVE OPERATION, units ready to be deployed and used.

For access to full video tutorials and user guides, please visit

[www.solargates.co.uk/instaboom/how-to](http://www.solargates.co.uk/instaboom/how-to)